




Alarm Layout

WHAT IS ALARM LAYOUT?

qulu provides the ability to dynamically create Alarm Layouts. Alarm Layouts is a function that allows bringing specific cameras to User's attention when a specific Event occurs. Users can easily find which camera should be focused on and what has happened in one click.

HOW TO ENABLE ALARM LAYOUT?

- Navigate to the resource panel, and right click on the camera in the resource panel. Then choose **Camera Rules**.
- Create a new rule, choosing an event, source camera(s)
- In the Action column, select **Show on Alarm Layout**.
- Choose the targeted camera(s), you can choose one or multiple camera(s).
- Click Apply, and then OK.
- When the event occurs and detects, the Alarm Layout will be seen on the Navigation Panel.

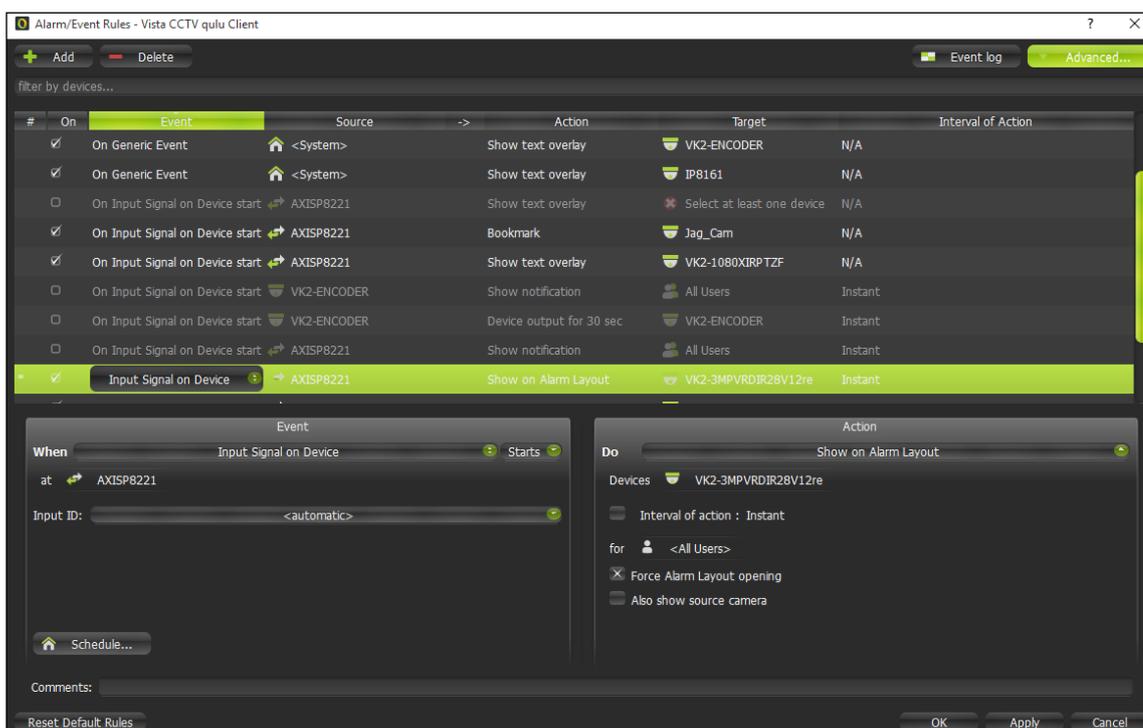

The screenshot shows the 'Alarm/Event Rules - Vista CCTV qulu Client' window. It features a table of rules and a configuration panel for a selected rule.

#	On	Event	Source	Action	Target	Interval of Action
<input checked="" type="checkbox"/>	On	Generic Event	<System>	Show text overlay	VK2-ENCODER	N/A
<input checked="" type="checkbox"/>	On	Generic Event	<System>	Show text overlay	IP8161	N/A
<input type="checkbox"/>	On	Input Signal on Device start	AXISP8221	Show text overlay	Select at least one device	N/A
<input checked="" type="checkbox"/>	On	Input Signal on Device start	AXISP8221	Bookmark	Jag_Cam	N/A
<input checked="" type="checkbox"/>	On	Input Signal on Device start	AXISP8221	Show text overlay	VK2-1080XIRP-TZF	N/A
<input type="checkbox"/>	On	Input Signal on Device start	VK2-ENCODER	Show notification	All Users	Instant
<input type="checkbox"/>	On	Input Signal on Device start	VK2-ENCODER	Device output for 30 sec	VK2-ENCODER	Instant
<input type="checkbox"/>	On	Input Signal on Device start	AXISP8221	Show notification	All Users	Instant
<input checked="" type="checkbox"/>	On	Input Signal on Device	AXISP8221	Show on Alarm Layout	VK2-3MPVRDIR28V12re	Instant

The configuration panel for the selected rule shows:

- Event:** Input Signal on Device (Starts)
- at:** AXISP8221
- Input ID:** <automatic>
- Action:** Show on Alarm Layout
- Devices:** VK2-3MPVRDIR28V12re
- Interval of action:** Instant
- for:** <All Users>
- Force Alarm Layout opening
- Also show source camera