

VIPER: How to Add Hikvision Cameras

The following Procedure explains how to add a Hikvision IP camera [Default Setting] to a VIPER NVR

Note

All Hikvision cameras need to be activated via SDAP software. Once this is done a password can be set up on the camera. {see camera instructions}

Cameras are set to IP Address 192.168.1.64 by Default




A seperate PC running SDAP software {Discovery Application} & POE switch will be needed to do the initial set up of the camera.

Default password on VIPER [admin/admin]


How to Activate Camera

Once Camera is activated you will be able to login into the cameras web interface.

•Go to Network > Basic Settings > TCP/IP set to DHCP

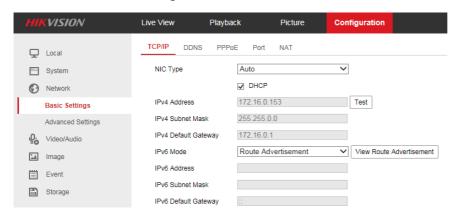

•Go to System > Security > Security Service

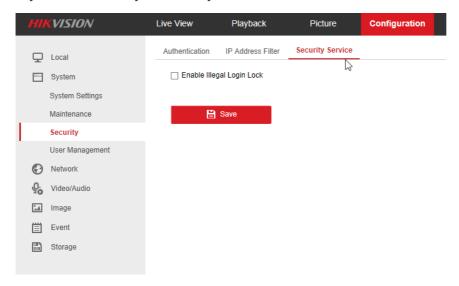

•Untick "Enable Illegal Login Lock" click Save




Once the above is completed connect the Camera to a free POE port on the VIPER

How to Connect Camera

•When the camera is connected the below is displayed




•Right click the on the camera window and select Camera Registration

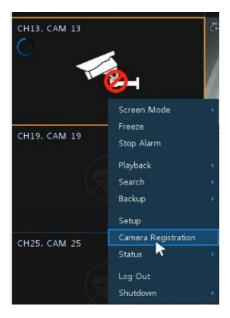

- ·List of cameras discovered is displayed
- •Select required camera
- Assign Channel
- •Enter camera login details User/Password



•Click check if details are correct the camera will show connected

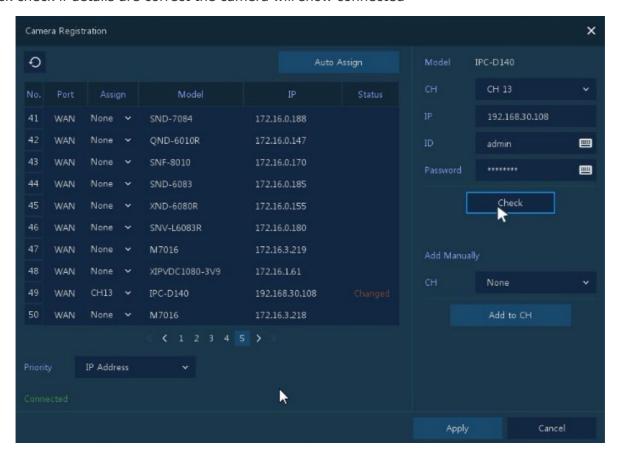



•Exit Menus and check the camera is displayed

End of procedure

